

AA Portable Power Corp.

www.batteryspace.com, Email: Sales@batteryspace.com

825 S 19th Street, Richmond, CA 94804 Tel: 510-525-2328 Fax: 510-439-2808

Specification & Instruction of DC Smart Charger CH-LFDC1215




AA Portable Power Corp



AA Portable Power Corp. www.batteryspace.com, Email: Sales@batteryspace.com 825 S 19th Street, Richmond, CA 94804 Tel: 510-525-2328 Fax: 510-439-2808

Specification:

Feature	 Designed for 12.8V lithium rechargeable battery with capacity ≥ 1.5Ah Input Power: 10V - 16V DC (male auto charger) Output Power: 14.6V DC, 1.5A (5.5 x 2.5 mm barrel male)
Function	 CC-CV Charging mode Automatic voltage detection with LED indicator (red/green) during charging process Charging: Red Fully charged: Green Automatic cut-off charging function by IC
Safety Protection	The protection is built in the circuit of the charger to prevent over load, and short circuit
Dimension	L 3.8" X W 2.3" X H 1.1"
Weight	4.2 oz (120g)

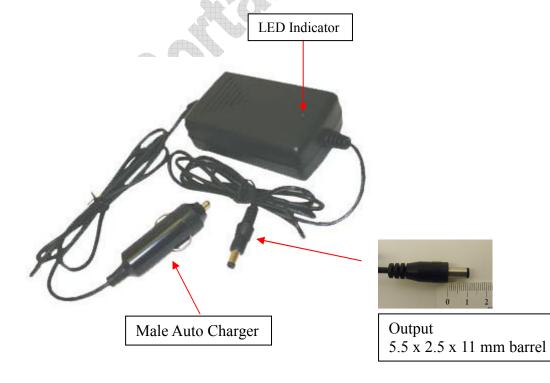



AA Portable Power Corp. www.batteryspace.com, Email: Sales@batteryspace.com

825 S 19th Street, Richmond, CA 94804 Tel: 510-525-2328 Fax: 510-439-2808

Instruction:

Please carefully read the following instruction before you start to use this charger.

Caution:

- This charger is only for Indoor use
- The charger shall be placed on a fixed horizontal surface when the charger is operated
- Avoid storing or operating the charger in highly humid place or any place with inflammable good
- Do not cover the charger when the charger is operated The ambient temperature shall not excess 40 °C
- Do not charge the battery on the list below Voltage < 12.8V, or Voltage > 12.8V Capacity < 1.5Ah
- Battery must be made by high drain current cell
- Completely plug the power cord into DC power resource
 Do not expose any metal part of the power cord during operation
 Do not use your hand or any of your body to touch the metal part of the
 power when you connect the power to the charger
- Do not disassembly the charger any time
- AA Portable Power is not responsible for any damage caused by any misusage

Operation Steps:

- 1. Plug the male auto charger adaptor into the DC power resource
- 2. Connect the battery to the output of charger $(5.5 \times 2.5 \text{ mm barrel male})$ with correct polarity
- 3. When it is in charging process, the LED indicator turns Red. When the battery is fully charged, the LED indicator will be Green
- 4. The charging time is variable depends on the battery