

		20Ah	40Ah	60Ah	100Ah	200Ah
12V	Slave	EMS-4SB20-V2	EMS-4SB-V2	EMS-4SB-V2	EMS-4SB-V2	EMS200-4SB-V6
	Wire	4 wire	4 wire	4 wire	4 wire	5 wire
24V	Slave	EMS-4SB20-V2	EMS-4SB-V2	EMS-4SB-V2	EMS-4SB-V2	EMS200-4SB-V6
	Wire	4 wire	4 wire	4 wire	4 wire	5 wire
36V	Slave	EMS-4SB20-V2	EMS-4SB-V2	EMS-4SB-V2	EMS-4SB-V2	EMS200-4SB-V6
	Wire	4 wire	4 wire	4 wire	4 wire	5 wire
48V	Slave	EMS-4SB20-V2	EMS-4SB-V2	EMS-4SB-V2	EMS-4SB-V2	EMS200-4SB-V6
	Wire	4 wire	4 wire	4 wire	4 wire	5 wire
60V	Slave	EMS-4SB-V7	EMS-4SB-V7	EMS-4SB-V7	EMS-4SB-V7	EMS200-4SB-V6
	Wire	5 wire	5 wire	5 wire	5 wire	5 wire
72V	Slave	EMS-4SB-V7	EMS-4SB-V7	EMS-4SB-V7	EMS-4SB-V7	EMS200-4SB-V6
	Wire	5 wire	5 wire	5 wire	5 wire	5 wire
96V	Slave	EMS-4SB-V7	EMS-4SB-V7	EMS-4SB-V7	EMS-4SB-V7	EMS200-4SB-V6
	Wire	5 wire	5 wire	5 wire	5 wire	5 wire