

Universal external Li-ion Battery Datasheet

Please read the following instructions carefully before use Safety Precautions.

Warning

- This appliance may only be connected to the appropriate voltage as indicated. Not doing so may cause a fire or electric shock.
- Do not pull on the electric cable when pulling out the plugs, rather, hold the electric plug itself, and then pull it out. Pulling on the cable instead of the plug can damage the cable and cause fire and electric shock.
- If foreign substances, such as, metal, water, or similar liquid, etc accidentally enter the appliance, unplug immediately from the electric outlet. Contact the store which provides service for your appliances. Failure to do so can cause fire and electric shock.
- Do not disassemble or reassemble the charger and Battery Pack.
- Do not leave the appliance where babies or small children can reach it. As they cannot read the instructions they might misuse the appliance, break it and injure themselves.

Caution

- To ensure safety, when not in use pull out the electric plug from the household electrical outlet.
- Do not cover the machine with cloth, etc, during use. This cause fire.
- Do not short circuit the terminals and other metal pads or the cable this cause fire.

Handling Precautions

- Only use the charger our company appointed.
- Turn off the LED to save power when un-using the battery.
- When output short, please use the charger to make it available.
- Do not subject the appliance to strong shock.
- Do not use in a place while is extremely hot or cold or a place subject to strong vibrations.
- Do not use in a place which receives direct sunlight and could reach high temperature.
- The product may be operated at ambient temperatures ranging from 50F-104F.

How to use

1. Choose Portable DVD Player suited connector, and plug into the connection cable.
2. Link the connection cable to the portable DVD Player and the out plug of the battery.

3. LED indication.


CH LED ON	Charging	CH LED OFF	Full Charged
-	Battery capacity 100%-75%-50%-25		
- -			
- - -			
- - - -			

Specifications

Adapter Input : AC100V/240V 50/60Hz
 Adapter Output : DC18V/1A
 Battery Output: 9V and 14.4V(10-16.8V)DC
 Battery Capacity : 9V=6300mAh,14.4V=4000mAh
 Battery Chemistry : Lithium Ion(Li-ion)
 Charge time : 360 minutes
 Physical Dimensions: 155mm x 100mm x 23cm

Connectors' specification

	H01	H02	H03	H04	H05	H06	H07	H08
L(mm)	12.5	12.5	14.0	9.50	12.5	14.0	11.5	10.50
OD(mm)	5.5	5.5	6.3	4.75	5.5	6.5	5.5	4.00
ID(mm)	2.5	2.1	2.9	1.75	1.4	4.3	3.4	1.75

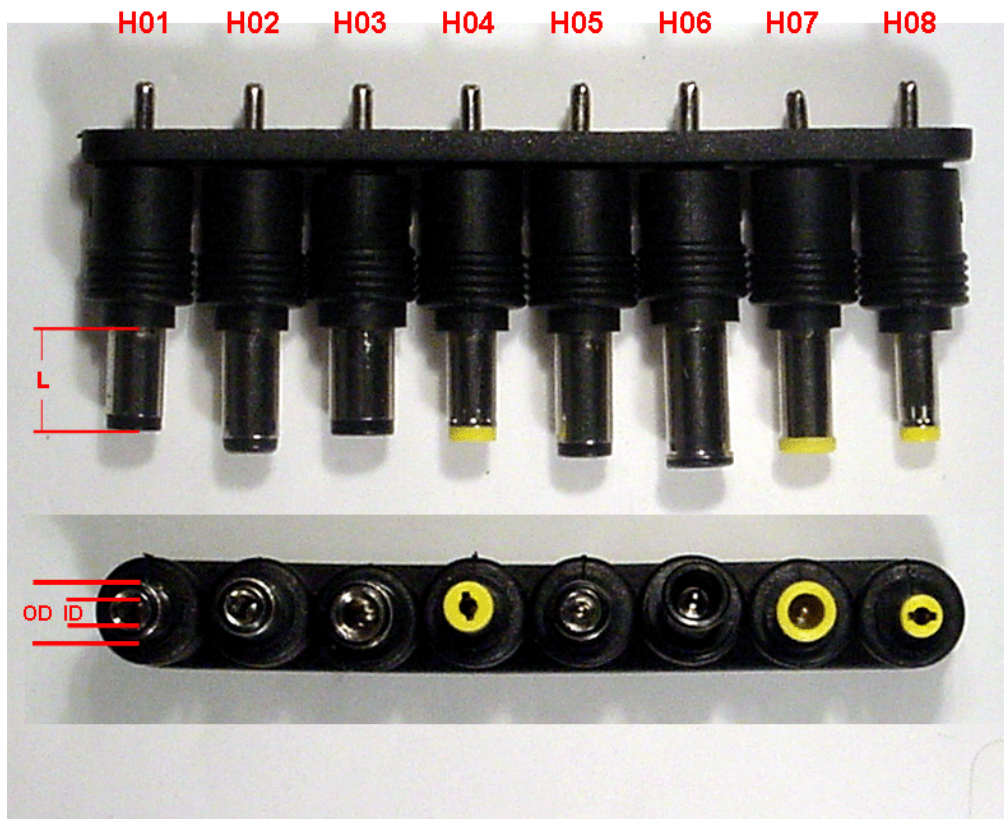

Compatible with Following Portable DVD Player

Connector	Brand	Fit DVD Player
H01	APEX	Apex PD 10, PD-10, PD-100, PD-510
	PANASONIC	DVD-LS5
H04	AIWA	Aiwa XD-DW5U
	AUDIOVOX	Audiovox DV-1680, D1680
	PANASONIC	Panasonic DVD-L10 DVD-L50, DVD-LA85 DVD-LA95 DVD-LV55 DVD-LV57 DVD-LV60, DVD-LV70, DVD-LV75, DVD-PA65, DVD-PV40, DVD-PV55
	SONY	DVP-FX700
H07	Polaroid	PDV-0700, PDV-0750, PDV-0800
	TOSHIBA	Toshiba SDP-1500 SDP-1200, SDP-1400, SD-P1200, SD-P1400, SD-P1500
H08	AIWA	XD-DW5
	AUDIOVOX	D1500, D1510, D1530, D1708, D1710, D1730, D1830, VBP50
	CYBERHOME	CH-LDV700B, CH-LDV702B, CH-LD707B, CH-LDV712B, CH-LD1010B
	EDDIE BAUER	PE702, PE802
	GO VIDEO	Go Video GVP-5850, Go Video GVP-7811
	INITIAL	DM830, DVD-680P, DVD-800P, DVD-5820, DVD-9510, IDM830, IDM1731, IDM1810, IDM9530, IDM9820
	MAGNAVOX	MPD-700, MPD-0820
	MALATA	DVD916V
	MEMOREX	MM-5000, MM-7000, MM-8000
	Mintek	DVD-1710, DVD-5830
	MINTEK	MDP-1010, MDP-1700, MDP-1710, MDP-1720, MDP-1770, MDP-1810, MDP-5510, MDP-5830, MDP-5860, MDP-5861
	US LOGIC	US Logic DVD-700P, DVD-800P
	XTREME MOBILE	WMVS100