

		UNIVERSAL ACD-100
CANON	Digital Cameras	
CANON	PowerShot A10	ACD-100
CANON	PowerShot A20	ACD-100
CANON	PowerShot A30	ACD-100
CANON	PowerShot A40	ACD-100
CANON	PowerShot A60	ACD-100
CANON	PowerShot A70	ACD-100
CANON	PowerShot A75	ACD-100
CANON	PowerShot A80	ACD-100
CANON	PowerShot A85	ACD-100
CANON	PowerShot A95	ACD-100
CANON	PowerShot A100	ACD-100
CANON	PowerShot A200	ACD-100
CANON	PowerShot A300	ACD-100
CANON	PowerShot A310	ACD-100
CANON	PowerShot A400	ACD-100
CANON	PowerShot S100	ACD-100
CANON	PowerShot S110	ACD-100
CANON	PowerShot S200	ACD-100
CANON	PowerShot S230	ACD-100
CANON	PowerShot S300	ACD-100
CANON	PowerShot S330	ACD-100
CANON	PowerShot S400	ACD-100
CANON	PowerShot S410	ACD-100
CANON	PowerShot S500	ACD-100
CANON	PowerShot S1 IS	ACD-100
CASIO		
CASIO	EX-P600 Pro	ACD-100
CASIO	GV 10	ACD-100
CASIO	GV-20	ACD-100
CASIO	QV-R3	ACD-100
CASIO	QV-R4	ACD-100
CASIO	QV-R40	ACD-100
CASIO	QV-R51	ACD-100
CASIO	QV-R52	ACD-100
CASIO	QV 70	ACD-100
CASIO	QV 700	ACD-100
CASIO	QV 770	ACD-100
CASIO	QV 780	ACD-100
CASIO	QV 2000UX	ACD-100
CASIO	QV 2300UX	ACD-100
CASIO	QV 2800UX	ACD-100
CASIO	QV 2900	ACD-100
CASIO	QV 3000 PLUS	ACD-100
CASIO	QV 3000EX	ACD-100
CASIO	QV 3500	ACD-100
CASIO	QV 4000	ACD-100
CASIO	QV 5000SX	ACD-100
CASIO	QV 5500SX	ACD-100
CASIO	QV 5700	ACD-100

CASIO	QV 7000SX	ACD-100
CASIO	QV 8000SX	ACD-100
FUJIFILM		
FUJIFILM	FinePix A101	ACD-100
FUJIFILM	FinePix A200	ACD-100
FUJIFILM	FinePix A201	ACD-100
FUJIFILM	FinePix A202	ACD-100
FUJIFILM	FinePix A203	ACD-100
FUJIFILM	FinePix A205	ACD-100
FUJIFILM	FinePix A210	ACD-100
FUJIFILM	FinePix A303	ACD-100
FUJIFILM	FinePix A310	ACD-100
FUJIFILM	FinePix A330	ACD-100
FUJIFILM	FinePix A340	ACD-100
FUJIFILM	DX 10	ACD-100
FUJIFILM	FinePix E500	ACD-100
FUJIFILM	FinePix E510	ACD-100
FUJIFILM	FinePix E550	ACD-100
FUJIFILM	FinePix F401	ACD-100
FUJIFILM	FinePix F402	ACD-100
FUJIFILM	FinePix F410	ACD-100
FUJIFILM	FinePix F440	ACD-100
FUJIFILM	FinePix F450	ACD-100
FUJIFILM	FinePix F455	ACD-100
FUJIFILM	FinePix F601	ACD-100
FUJIFILM	FinePix F610	ACD-100
FUJIFILM	FinePix F700	ACD-100
FUJIFILM	FinePix F710	ACD-100
FUJIFILM	FinePix F810	ACD-100
FUJIFILM	FinePix M603	ACD-100
FUJIFILM	FinePix S1 Pro	ACD-100
FUJIFILM	FinePix S2 Pro	ACD-100
FUJIFILM	FinePix S20 Pro	ACD-100
FUJIFILM	FinePix S602	ACD-100
FUJIFILM	FinePix S602Z Pro	ACD-100
FUJIFILM	FinePix S3000	ACD-100
FUJIFILM	FinePix S3100	ACD-100
FUJIFILM	FinePix S5000	ACD-100
FUJIFILM	FinePix S5100	ACD-100
FUJIFILM	FinePix 30i	ACD-100
FUJIFILM	FinePix 40i	ACD-100
FUJIFILM	FinePix 50i	ACD-100
FUJIFILM	FinePix 1300	ACD-100
FUJIFILM	FinePix 1400	ACD-100
FUJIFILM	FinePix 2300	ACD-100
FUJIFILM	FinePix 2400	ACD-100
FUJIFILM	FinePix 2600	ACD-100
FUJIFILM	FinePix 2650Z	ACD-100
FUJIFILM	FinePix 2800	ACD-100
FUJIFILM	FinePix 3800	ACD-100
FUJIFILM	FinePix 4700	ACD-100

FUJIFILM	FinePix 4800	ACD-100
FUJIFILM	FinePix 4900	ACD-100
FUJIFILM	FinePix 6800	ACD-100
FUJIFILM	FinePix 6900	ACD-100
FUJIFILM	MX 500	ACD-100
FUJIFILM	MX 600	ACD-100
FUJIFILM	MX 700	ACD-100
FUJIFILM	MX 1200	ACD-100
FUJIFILM	MX 1700	ACD-100
FUJIFILM	MX 2700	ACD-100
FUJIFILM	MX 2900	ACD-100
GATEWAY		
GATEWAY	DC-T50	ACD-100
HEWLETT	PACKARD	
HP	C-200	ACD-100
HP	C-200xi	ACD-100
HP	PhotoSmart 120, 120xi	ACD-100
HP	PhotoSmart 215	ACD-100
HP	PhotoSmart 312, 312xi	ACD-100
HP	PhotoSmart 315	ACD-100
HP	PhotoSmart 318	ACD-100
HP	PhotoSmart 320, 320xi	ACD-100
HP	PhotoSmart 435	ACD-100
HP	PhotoSmart 612, 612xi	ACD-100
HP	PhotoSmart 620, 620xi	ACD-100
HP	PhotoSmart 635	ACD-100
HP	PhotoSmart 715	ACD-100
HP	PhotoSmart 720, 720xi	ACD-100
HP	PhotoSmart 735, 735xi	ACD-100
HP	PhotoSmart 812	ACD-100
HP	PhotoSmart 850, 850xi	ACD-100
HP	PhotoSmart 935, 935xi	ACD-100
HP	PhotoSmart 945	ACD-100
HP	PhotoSmart R707 (R07 ?)	ACD-100
HP	X31	ACD-100
KODAK		
KODAK	CX 4200	ACD-100
KODAK	CX 4210	ACD-100
KODAK	CX 4230	ACD-100
KODAK	CX 4300	ACD-100
KODAK	CX 4310	ACD-100
KODAK	CX 6230	ACD-100
KODAK	CX 6330	ACD-100
KODAK	CX 7220	ACD-100
KODAK	CX 7330	ACD-100
KODAK	CX 7430	ACD-100
KODAK	CX 7530	ACD-100
KODAK	DC 200	ACD-100
KODAK	DC 200 PLUS	ACD-100
KODAK	DC 210	ACD-100
KODAK	DC 210 PLUS	ACD-100

KODAK	DC 215	ACD-100
KODAK	DC 220	ACD-100
KODAK	DC 240	ACD-100
KODAK	DC 260	ACD-100
KODAK	DC 265	ACD-100
KODAK	DC 280	ACD-100
KODAK	DC 290	ACD-100
KODAK	DC 3200Z	ACD-100
KODAK	DC 3400Z	ACD-100
KODAK	DC 5000Z	ACD-100
KODAK	DX 4330	ACD-100
KODAK	DX 4530	ACD-100
KODAK	DX 6340	ACD-100
KODAK	DX 6440	ACD-100
KODAK	DX 6490	ACD-100
KODAK	DX 7440	ACD-100
KODAK	DX 7590	ACD-100
KODAK	DX 7630	ACD-100
KODAK	LS 420	ACD-100
KODAK	LS 443	ACD-100
KODAK	LS 633	ACD-100
KODAK	LS 743	ACD-100
KODAK	LS 753	ACD-100
KODAK	LS 755	ACD-100
KODAK	LS 773	ACD-100
MINOLTA	(KONICA / MINOLTA)	
MINOLTA	DiIMAGE 2300	ACD-100
MINOLTA	DiIMAGE 2330Z	ACD-100
MINOLTA	DiIMAGE 5	ACD-100
MINOLTA	DiIMAGE 7	ACD-100
MINOLTA	DiIMAGE 7i	ACD-100
MINOLTA	DiIMAGE 7Hi	ACD-100
MINOLTA	DiIMAGE A1	ACD-100
MINOLTA	DiIMAGE A2	ACD-100
MINOLTA	DiIMAGE A200	ACD-100
MINOLTA	DiIMAGE E201	ACD-100
MINOLTA	DiIMAGE E203	ACD-100
MINOLTA	DiIMAGE EX1500	ACD-100
MINOLTA	DiIMAGE S304	ACD-100
MINOLTA	DiIMAGE S404	ACD-100
MINOLTA	DiIMAGE S414	ACD-100
MINOLTA	DiIMAGE VC-D7	ACD-100
MINOLTA	DiIMAGE X20	ACD-100
MINOLTA	DiIMAGE X31	ACD-100
MINOLTA	DiIMAGE X50	ACD-100
MINOLTA	DiIMAGE Z1	ACD-100
MINOLTA	DiIMAGE Z2	ACD-100
MINOLTA	DiIMAGE Z3	ACD-100
MINOLTA	DiIMAGE Z10	ACD-100
NIKON		
NIKON	COOLPIX 100	ACD-100

NIKON	COOLPIX 300	ACD-100
NIKON	COOLPIX 600	ACD-100
NIKON	COOLPIX 700	ACD-100
NIKON	COOLPIX 750	ACD-100
NIKON	COOLPIX 775	ACD-100
NIKON	COOLPIX 800	ACD-100
NIKON	COOLPIX 880	ACD-100
NIKON	COOLPIX 885	ACD-100
NIKON	COOLPIX 900	ACD-100
NIKON	COOLPIX 950	ACD-100
NIKON	COOLPIX 990	ACD-100
NIKON	COOLPIX 995	ACD-100
NIKON	COOLPIX 2000	ACD-100
NIKON	COOLPIX 2100	ACD-100
NIKON	COOLPIX 3100	ACD-100
NIKON	COOLPIX 4300	ACD-100
NIKON	COOLPIX 4500	ACD-100
NIKON	COOLPIX 4800	ACD-100
NIKON	COOLPIX 5000	ACD-100
NIKON	COOLPIX 5400	ACD-100
NIKON	COOLPIX 5700	ACD-100
NIKON	COOLPIX 8700	ACD-100
NIKON	CoolPix SQ	ACD-100
OLYMPUS		
OLYMPUS	AZ-1	ACD-100
OLYMPUS	C50 ZOOM	ACD-100
OLYMPUS	C 60 Zoom	ACD-100
OLYMPUS	C211Z	ACD-100
OLYMPUS	C320L	ACD-100
OLYMPUS	C460 Zoom del sol	ACD-100
OLYMPUS	C700UZ	ACD-100
OLYMPUS	C720UZ	ACD-100
OLYMPUS	C725UZ	ACD-100
OLYMPUS	C730UZ	ACD-100
OLYMPUS	C740UZ	ACD-100
OLYMPUS	C745UZ	ACD-100
OLYMPUS	C750UZ	ACD-100
OLYMPUS	C755UZ	ACD-100
OLYMPUS	C760UZ	ACD-100
OLYMPUS	C765UZ	ACD-100
OLYMPUS	C770UZ	ACD-100
OLYMPUS	C2000	ACD-100
OLYMPUS	C2020	ACD-100
OLYMPUS	C2030	ACD-100
OLYMPUS	C2040	ACD-100
OLYMPUS	C2100UZ	ACD-100
OLYMPUS	C2500L	ACD-100
OLYMPUS	C3000Z	ACD-100
OLYMPUS	C3020Z	ACD-100
OLYMPUS	C3030Z	ACD-100
OLYMPUS	C3040Z	ACD-100
OLYMPUS	C4000	ACD-100

OLYMPUS	C4040Z	ACD-100
OLYMPUS	C5000Z	ACD-100
OLYMPUS	C5050Z	ACD-100
OLYMPUS	C5060Z	ACD-100
OLYMPUS	C7000	ACD-100
OLYMPUS	C8080WZ	ACD-100
OLYMPUS	BRIO D-100	ACD-100
OLYMPUS	BRIO D-150	ACD-100
OLYMPUS	BRIO D-230	ACD-100
OLYMPUS	D-40E	ACD-100
OLYMPUS	D-200L	ACD-100
OLYMPUS	D-220Z	ACD-100
OLYMPUS	D-320Z	ACD-100
OLYMPUS	D-340L	ACD-100
OLYMPUS	D-340R	ACD-100
OLYMPUS	D-360L	ACD-100
OLYMPUS	D-370	ACD-100
OLYMPUS	D-380	ACD-100
OLYMPUS	D-390	ACD-100
OLYMPUS	D-395	ACD-100
OLYMPUS	D-400Z	ACD-100
OLYMPUS	D-450Z	ACD-100
OLYMPUS	D-460Z	ACD-100
OLYMPUS	D-490Z	ACD-100
OLYMPUS	D-500L	ACD-100
OLYMPUS	D-510Z	ACD-100
OLYMPUS	D-520E	ACD-100
OLYMPUS	D-535	ACD-100
OLYMPUS	D-540Z	ACD-100
OLYMPUS	D-550Z	ACD-100
OLYMPUS	D-560Z	ACD-100
OLYMPUS	D-565Z	ACD-100
OLYMPUS	D-575Z	ACD-100
OLYMPUS	D-580Z	ACD-100
OLYMPUS	D-600L	ACD-100
OLYMPUS	D-620L	ACD-100
OLYMPUS	E10	ACD-100
OLYMPUS	E20N	ACD-100
OLYMPUS	Stylus 300 Digital	ACD-100
OLYMPUS	Stylus 400 Digital	ACD-100
OLYMPUS	Stylus 410 Digital	ACD-100
OLYMPUS	FERRARI / AZ1	ACD-100
PANASONIC		
PANASONIC	Lumix DMC-F7	ACD-100
PANASONIC	Lumix DMC-FZ1	ACD-100
PANASONIC	Lumix DMC-FZ3	ACD-100
PANASONIC	Lumix DMC-FZ10	ACD-100
PANASONIC	Lumix FZ 15	ACD-100
PANASONIC	Lumix FZ 20	ACD-100
PANASONIC	Lumix DMC-LC5	ACD-100
PANASONIC	Lumix DMC-LC40	ACD-100

PENTAX		
PENTAX	Optio 230	ACD-100
PENTAX	Optio 33L	ACD-100
PENTAX	Optio 33LF	ACD-100
PENTAX	Optio 33WR	ACD-100
PENTAX	Optio 43WR	ACD-100
PENTAX	Optio 330	ACD-100
PENTAX	Optio 330RS	ACD-100
PENTAX	Optio 330GS	ACD-100
PENTAX	Optio 430	ACD-100
PENTAX	Optio 430RS	ACD-100
PENTAX	Optio S40	ACD-100
PENTAX	Optio 450	ACD-100
PENTAX	Optio 550	ACD-100
PENTAX	Optio 555	ACD-100
PENTAX	750Z	ACD-100
RICOH		
RICOH	Caplio RR1	ACD-100
RICOH	RDC-2	ACD-100
RICOH	RDC-2E	ACD-100
RICOH	RDC-7	ACD-100
RICOH	RDC-300	ACD-100
RICOH	RDC-300Z	ACD-100
RICOH	RDC-i500	ACD-100
RICOH	RDC-i700	ACD-100
RICOH	RDC 4200	ACD-100
RICOH	RDC 4300	ACD-100
RICOH	RDC 5000	ACD-100
RICOH	RDC 5300	ACD-100
SONY	DIGITAL STILL CAMERAS	
SONY	DSC-P8	ACD-100
SONY	DSC-P10	ACD-100
SONY	DSC-P32	ACD-100
SONY	DSC-P41	ACD-100
SONY	DSC-P52	ACD-100
SONY	DSC-P72	ACD-100
SONY	DSC-P73	ACD-100
SONY	DSC-P92	ACD-100
SONY	DSC-P93	ACD-100
SONY	DSC-P100	ACD-100
SONY	DSC-P150	ACD-100
SONY	DSC-V1	ACD-100
SONY	DSC-W1	ACD-100
TOSHIBA		
TOSHIBA	PDR-2300	ACD-100
TOSHIBA	PDR-3300	ACD-100
TOSHIBA	PDR-3310	ACD-100
TOSHIBA	PDR-3320	ACD-100
TOSHIBA	PDR-3330	ACD-100
TOSHIBA	PDR-4300	ACD-100
TOSHIBA	PDR-M1	ACD-100
TOSHIBA	PDR-M3	ACD-100

TOSHIBA	PDR-M4	ACD-100
TOSHIBA	PDR-M5	ACD-100
TOSHIBA	PDR-M11	ACD-100
TOSHIBA	PDR-M21	ACD-100
TOSHIBA	PDR-M25	ACD-100
TOSHIBA	PDR-M60	ACD-100
TOSHIBA	PDR-M61	ACD-100
TOSHIBA	PDR-M65	ACD-100
TOSHIBA	PDR-M70	ACD-100
TOSHIBA	PDR-M71	ACD-100
TOSHIBA	PDR-M81	ACD-100
TOSHIBA	PDR-T10	ACD-100
TOSHIBA	PDR-T20	ACD-100
TOSHIBA	PDR-T30	ACD-100