

AA Portable Power Corp.

www.batteryspace.com, Email: Sales@batteryspace.com

825 S 19th Street, Richmond, CA 94804 Tel: 510-525-2328 Fax: 510-439-2808

Specification & Instruction of Smart Charger CH-UN3618





www.BatterySpace.com

AA Portable Power Corp




AA Portable Power Corp. www.batteryspace.com, Email: Sales@batteryspace.com 825 S 19th Street, Richmond, CA 94804

Tel: 510-525-2328 Fax: 510-439-2808

Specification:

Feature	 Designed for 36V NiNH/NiCd battery pack with capacity more than 1800mAh Input Power: 100V - 240V AC (universal AC male adapter) Output Current: 1.8A (3 pin female cannon plug) Pin 1 = Vbatt; Pin 2 = Ground; Pin3 = Thermistor
Function	 Automatic voltage detection with LED indicator (red/green) during charging process Power on: Green Charging: Red Fully charged: Green Note: if the battery does not completely connect with cable, The LED indicator will alternatively flash Red/Green Automatic cut-off charging function by IC Stop charging when -ΔV is detected by IC
Safety Protection	 The protection is built in the charger for short circuit, and reverse polarity Thermistor is built to prevent overheat of battery (battery temp > 0.5°C/60S)
Dimension	L 2.7" X W 3.6" X H 4.9"
Weight	1lb 3.0oz (544g)

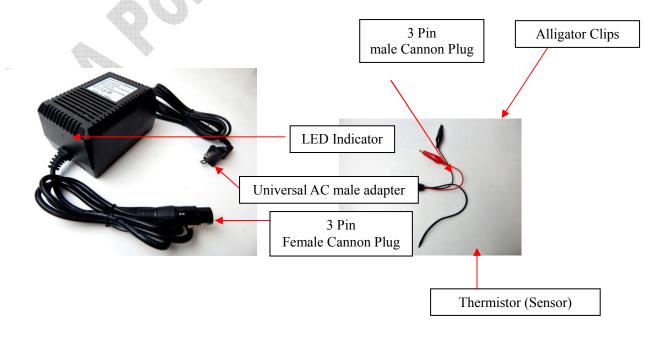



AA Portable Power Corp. www.batteryspace.com, Email: Sales@batteryspace.com

825 S 19th Street, Richmond, CA 94804 Tel: 510-525-2328 Fax: 510-439-2808

Instruction:

Please carefully read the following instruction before you start to use this charger.

Caution:

- This charger is only for Indoor use
- The charger shall be placed on a fixed horizontal surface when the charger is operated
- Avoid storing or operating the charger in highly humid place or any place with inflammable good
- Do not cover the charger when the charger is operated The ambient temperature shall not excess 40 °C
- Do not charge the battery on the list below Voltage < 36V, or Voltage > 36V Capacity < 1800mAh
- Battery must be made by high drain current cell
- Do not disassembly the charger any time
- AA Portable Power is not responsible for any damage caused by any misusage

Operation Steps:

- 1. Connect transfer cable (3 pin male cannon plug alligator clips) to the output of the charger (3 pin female cannon plug)
- 2. Connect the battery to the output of charger with correct polarity (Red cable connects to positive, Black cable connects to negative)
- 3. Attach the sensor of thermistor on the surface of the battery
- 4. Plug the power cord into the AC power resource
- 5. When the power cord is connected to power resource, the LED indicator will be Green. When it is in charging process, the LED indicator turns Red. When the battery is fully charged, the LED indicator will be Green

Note: When the battery does not completely connect to the transfer cable the LED will alternatively flash Red and Green and the battery will not be charged.

6. The charging time is variable depends on the battery